


NO SCALE

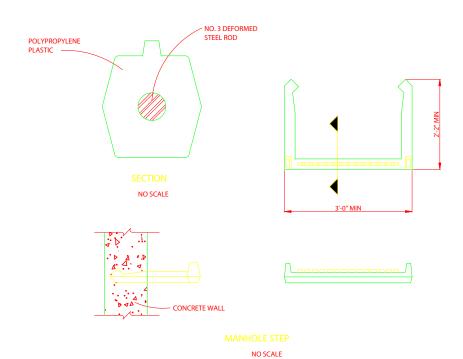

- 1. SEE SPECS FOR CAST-IN-PLACE BASE
- PREPARATION.

 2. USING GRADE RINGS, ADJUST CAST IRON
 RING AND COVER ELEVATIONS AND SLOPE TO BE
 1" ABOVE GRADE IN OPEN AND GRASSED AREAS,
 OR FLUSH IN PAVED SURFACES.